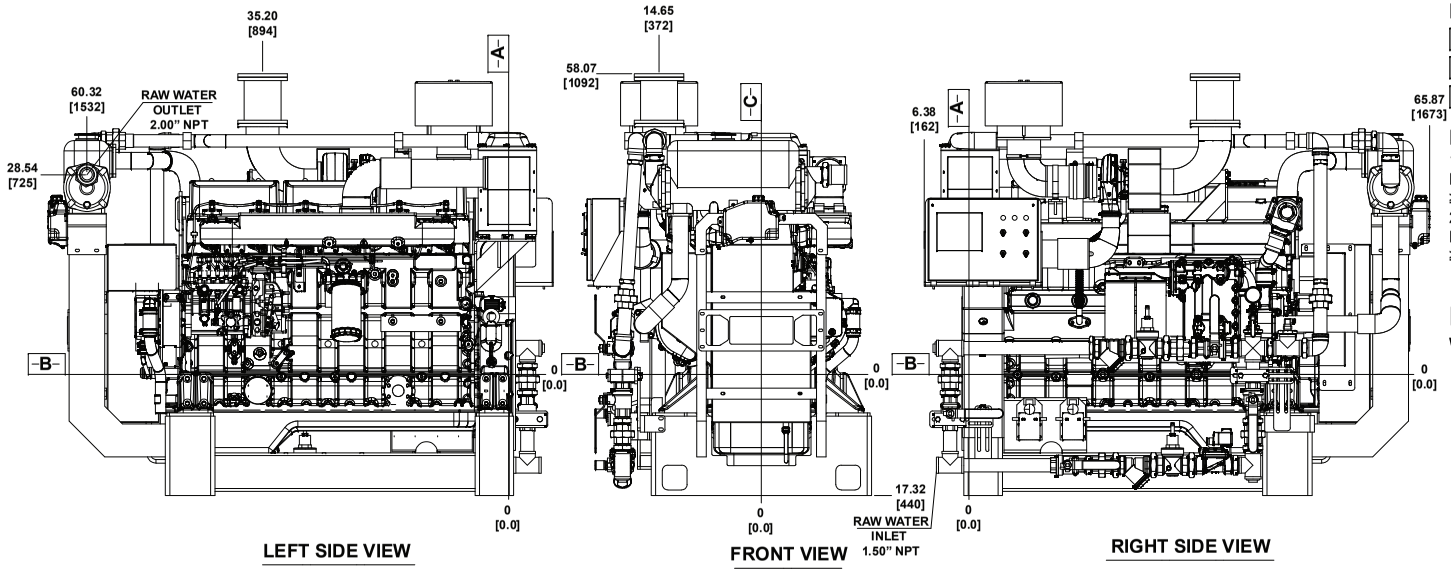

LEFT SIDE VIEW

FRONT VIEW

RIGHT SIDE VIEW

DATUMS:

-A- — DIMENSIONAL FACE OF FLYWHEEL

-B- — ENGINE HORIZONTAL CENTER (CRANKSHAFT)

-C- — ENGINE VERTICAL CENTER (CRANKSHAFT)

NOTES:

1. FUEL SUPPLY PIPING MINIMUM INSIDE DIAMETER FROM TANK TO ENGINE MUST BE ≥ 0.500 [12].
2. FUEL RETURN PIPING MINIMUM INSIDE DIAMETER FROM TANK TO ENGINE MUST BE ≥ 0.500 [12].

DRAWING SUBJECT TO CHANGE WITHOUT NOTICE.

A - EXHAUST FLANGE (4")

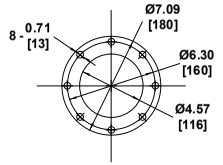

SCALE 2:1

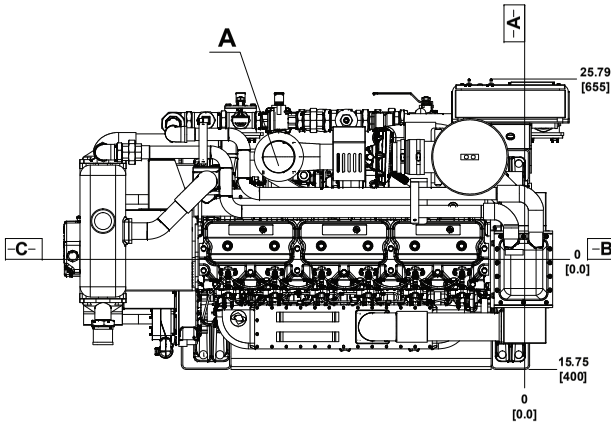

TOP VIEW

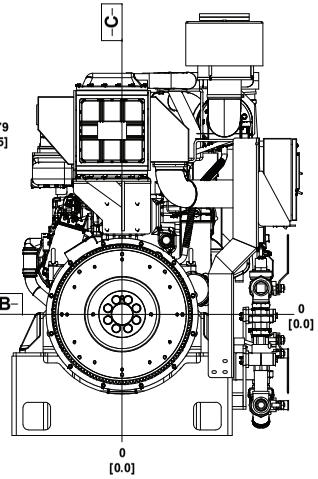

REAR VIEW

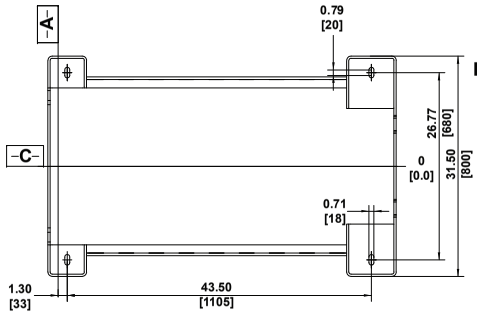

MOUNTING DIMENSIONS

FLYWHEEL HOUSING SAE #1

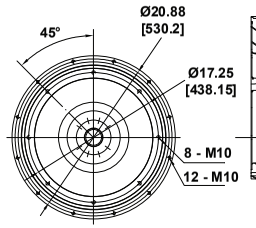

FLYWHEEL 14.00

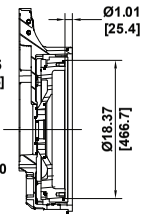

NOTES:

1. ALL PLUMBING MUST BE SUPPORTED AND/OR ISOLATED SO THAT NO WEIGHT OR STRESS IS APPLIED TO ANY ENGINE COMPONENT.
2. REFER TO SPECIFIC MODELS' INSTALLATION, OPERATION & MAINTENANCE MANUAL FOR INSTALLATION GUIDELINES.

REV	DESCRIPTION	DWN	APVD	DATE
A	CREATION	MJF		09/01/2020

AMERIFLO

REV

UNITS IN[MM]

DRW BY: MJF DATE: 09/01/2020

CHK BY: DATE:

APPROVED: DATE:

NAME: INSTALLATION DRAWING DIESEL FIRE PUMP DRIVER MODEL AF6-135B

PART NO.: AF6-135B-00

MATERIAL:

PROJECTION:

PROJECT:

SCALE: NONE

PAGE 1 OF 1