DATUMS:

-A- — DIMENSIONAL FACE OF FLYWHEEL
-B- — ENGINE HORIZONTAL CENTER (CRANKSHAFT)
-C- — ENGINE VERTICAL CENTER (CRANKSHAFT)

NOTES:

1. FUEL SUPPLY PIPING MINIMUM INSIDE DIAMETER FROM TANK TO ENGINE MUST BE ≥ 0.500 [12].
2. FUEL RETURN PIPING MINIMUM INSIDE DIAMETER FROM TANK TO ENGINE MUST BE ≥ 0.500 [12].

DRAWING SUBJECT TO CHANGE WITHOUT NOTICE.

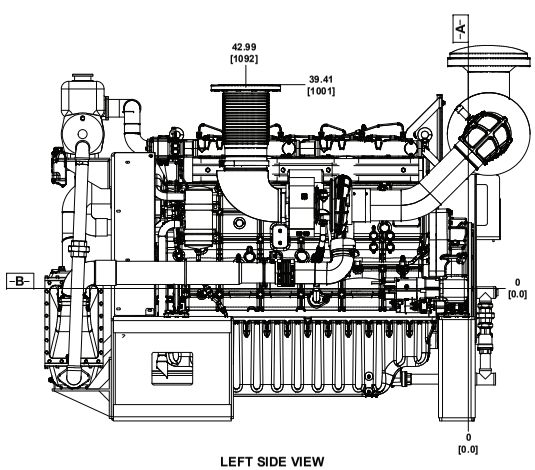

LEFT SIDE VIEW

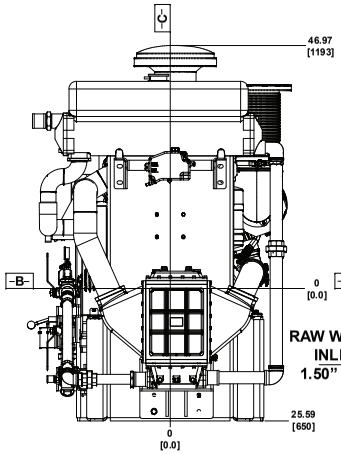

FRONT VIEW

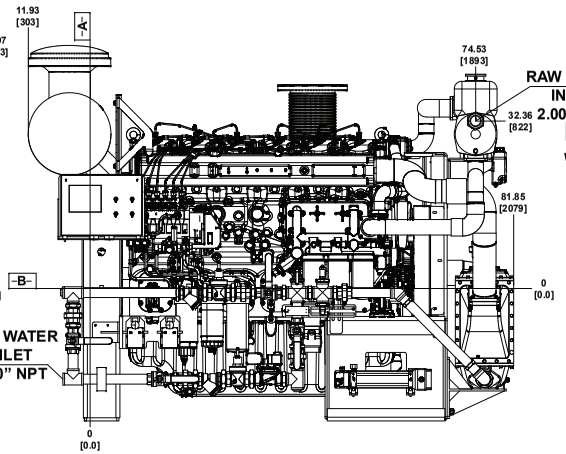

RIGHT SIDE VIEW

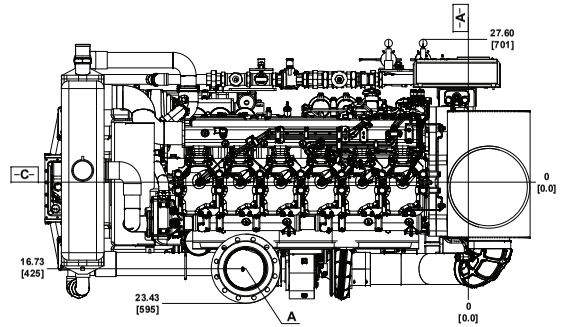

TOP VIEW

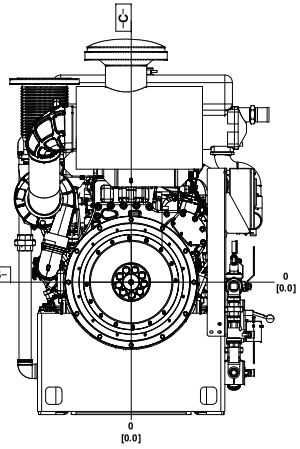

REAR VIEW

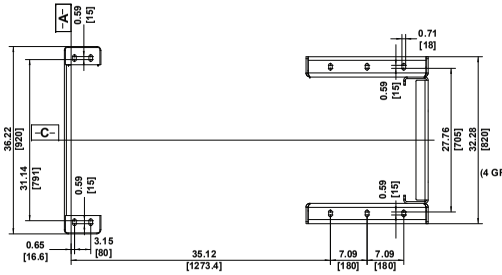

MOUNTING DIMENSIONS

A - EXHAUST FLANGE



FLYWHEEL HOUSING SAE #1

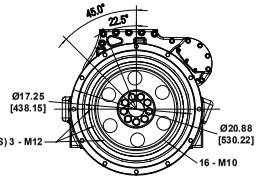

FLYWHEEL 14.00



NOTES:

1. ALL PLUMBING MUST BE SUPPORTED AND/OR ISOLATED SO THAT NO WEIGHT OR STRESS IS APPLIED TO ANY ENGINE COMPONENT.
2. REFER TO SPECIFIC MODELS' INSTALLATION, OPERATION & MAINTENANCE MANUAL FOR INSTALLATION GUIDELINES.

REV	DESCRIPTION	DWN	APVD	DATE
A	CREATION	MJF		07/24/2012

AMERIFLO

REV
UNITS IN[MM]

DRW BY: MJF DATE: 07/24/2024
CHK BY: DATE:
APPROVED: DATE:

NAME: INSTALLATION DRAWING DIESEL FIRE PUMP DRIVER MODEL AF6-150/150B
PART NO.: AF6-150/150B
MATERIAL:

PROJECTION:
PROJECT:
SCALE: NONE
PAGE 1 OF 1