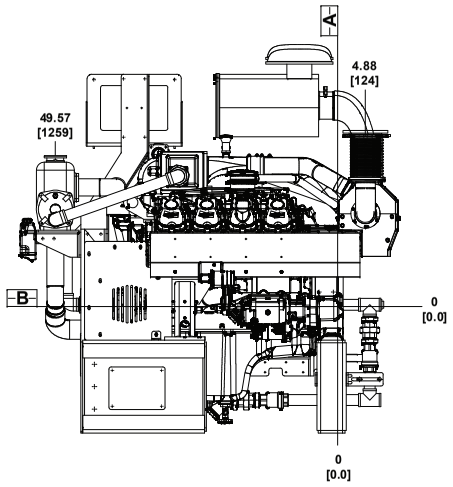

LEFT SIDE VIEW

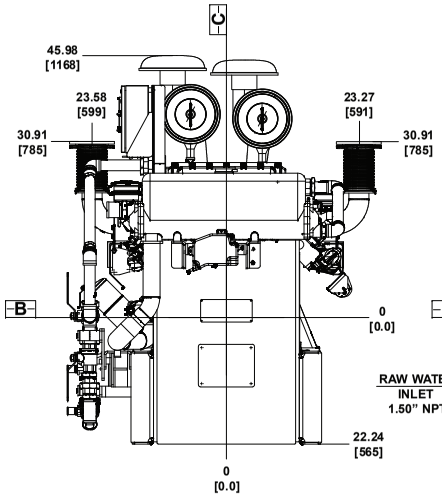

FRONT VIEW

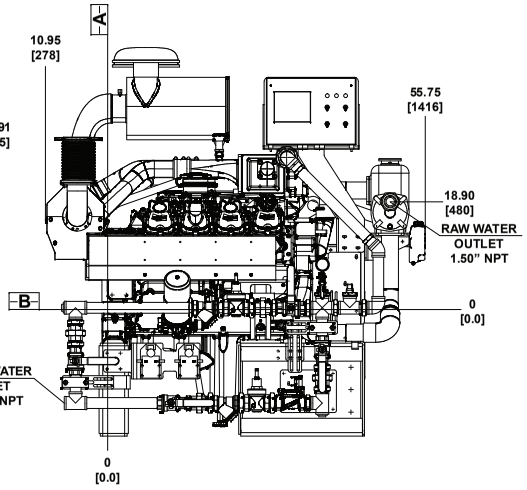

RIGHT SIDE VIEW

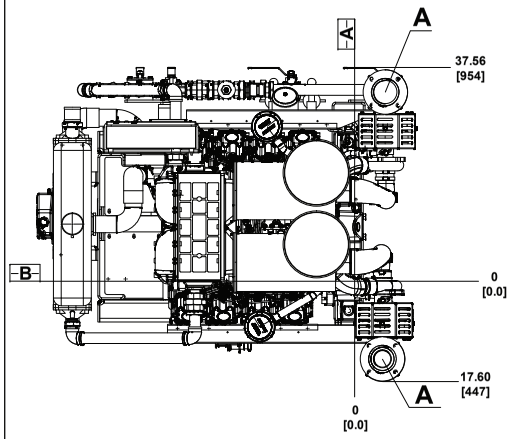

TOP VIEW

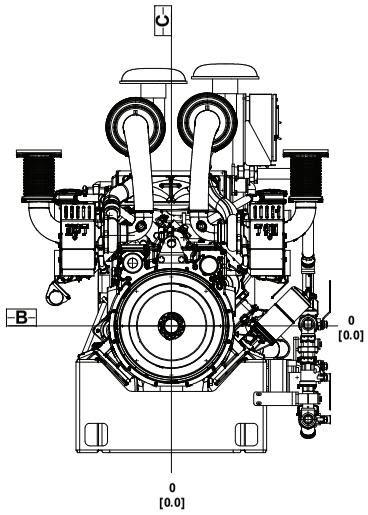

REAR VIEW

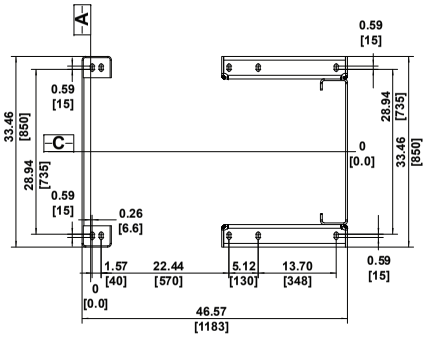

MOUNTING DIMENSIONS

DATUMS:

- -A- — DIMENSIONAL FACE OF FLYWHEEL
- -B- — ENGINE HORIZONTAL CENTER (CRANKSHAFT)
- -C- — ENGINE VERTICAL CENTER (CRANKSHAFT)

NOTES:

1. FUEL SUPPLY PIPING MINIMUM INSIDE DIAMETER FROM TANK TO ENGINE MUST BE ≥ 0.512 [13].
2. FUEL RETURN PIPING MINIMUM INSIDE DIAMETER FROM TANK TO ENGINE MUST BE ≥ 0.325 [8].

DRAWING SUBJECT TO CHANGE WITHOUT NOTICE.

A - EXHAUST FLANGE X2 (4")



SCALE 2:1

FLYWHEEL HOUSING SAE #1

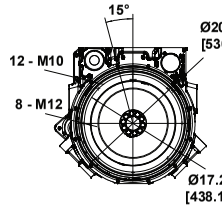

FLYWHEEL 14.00

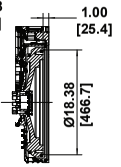

NOTES:

1. ALL PLUMBING MUST BE SUPPORTED AND/OR ISOLATED SO THAT NO WEIGHT OR STRESS IS APPLIED TO ANY ENGINE COMPONENT.
2. REFER TO SPECIFIC MODELS' INSTALLATION, OPERATION & MAINTENANCE MANUAL FOR INSTALLATION GUIDELINES.

REV	DESCRIPTION	DWN	APVD	DATE
A	CREATION	MJF		09/01/2020

AMERIFLO

REV

UNITS IN[MM]

DRW BY: MJF DATE: 09/01/2020

CHK BY: DATE:

APPROVED: DATE:

NAME: INSTALLATION DRAWING DIESEL FIRE PUMP DRIVER MODEL AF8-128

PART NO.: AF8-128-00

MATERIAL:

PROJECTION:

PROJECT:

SCALE: NONE

PAGE 1 OF 1